

Easy Replacement with finger grip

Classic double blade squeegee

Replacing the replacement cassette is easy.
Please note the finger grip.

Easy to remove



Easy to replace

Make sure the replacement cassette is placed precisely on top of the squeegee base, when inserting the new cassette.



Visit us at vikan.com

Vikan A/S Rævevej 1 7800 Skive Denmark
Tel.: +45 96 14 26 00 Fax: +45 96 14 26 55 vikan@vikan.com

